


Installation and usage instructions

Thank you for choosing a TANKGUARD maintenance-free impermeable tank base. We've provided the following guidelines to ensure proper installation and maintenance. When installed and maintained properly, you can expect years of worry-free usage.

Step 1: Prepare the surface

Choose a solid, compacted, level surface such as crushed gravel or well-drained soil. Remove any large or sharp rocks or other objects. Do not place the tank base over a pit or hole.

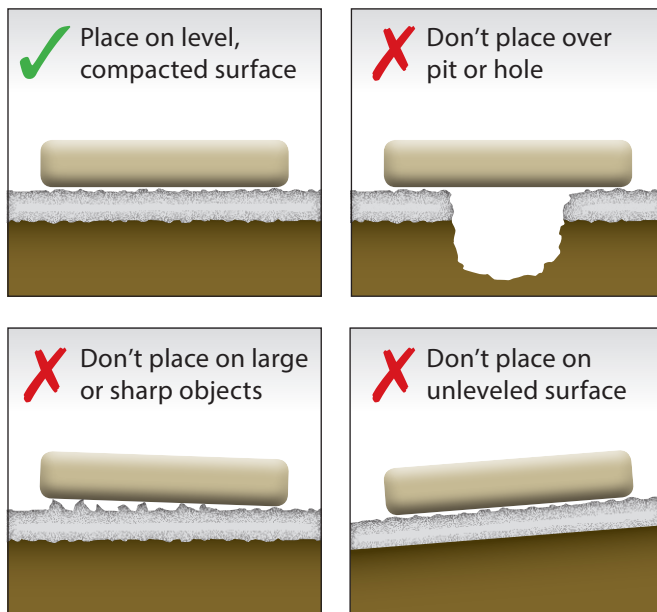


Step 2: Assemble the base pieces

Always use two or more people to handle and install your TANKGUARD tank base. Remember to wear protective gear such as hard hats, gloves and steel-toed boots, and to use proper lifting techniques.


Using the guide to the right, place the first piece in the location prepared per above instructions. Interlock the additional pieces in the order shown by dropping into place vertically.



Assemble the 4-piece cone-bottom base as shown

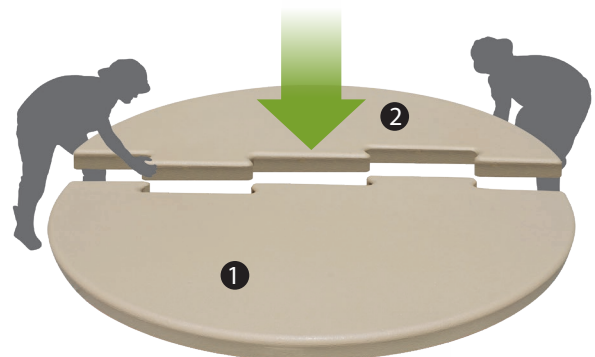

Assemble the 2-piece flat-bottom base as shown

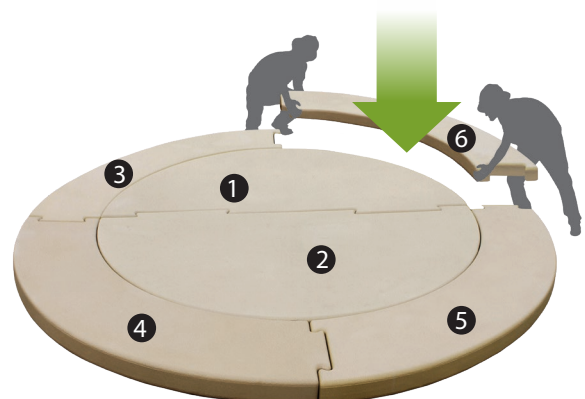

Assemble the 6-piece flat-bottom base as shown

TANKGUARD

Installation and usage instructions


Step 3: Set tank on base

After assembling the tank base pieces, you are ready to set your tank. Before setting the tank, double-check that your base is level.

Additional usage guidelines

1. Never modify product by cutting, drilling or otherwise penetrating the surface. This would expose the core, leaving it vulnerable to chemical attack or UV degradation.
2. Be sure that any object or equipment placed on the tank base has no sharp points or protrusions that could puncture the product or its coating.
3. User is responsible for chemical compatibility. See our chemical compatibility sheet for a list of compatibility ratings for common industrial chemicals.
4. Do not exceed the weight load capacity listed on the product. User is responsible to ensure the weight load is not exceeded at any surface point. See table on right.
5. Maximum long-term temperature exposure should not exceed 165°F (74°C).
6. Flat bottom bases are designed to be used with flat bottom tanks **only** – not for use with skirted tanks or cone bottom tanks of any kind.

In the event that the coating is damaged, in many cases repairs can be made using a repair kit available online from ASSETGUARD through carbodirect.com.

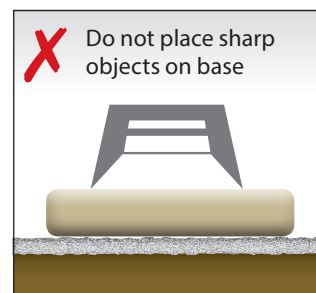

Maximum weight load capacity

| Diameter | Tank base type | Standard density load capacity (lbs) | High density load capacity (lbs) |
|----------|----------------|--------------------------------------|----------------------------------|
| 36" | Flat Bottom | N/A | 23,000 |
| 8' | Flat Bottom | 110,000 | 166,000 |
| 10' | Flat Bottom | 173,000 | 260,000 |
| 12' | Flat Bottom | 248,000 | 372,000 |
| 12' | Cone Bottom | 244,000 | N/A |
| 13' 6" | Flat Bottom | 312,000 | 472,000 |
| 13' 6" | Cone Bottom | 309,000 | N/A |
| 15' 6" | Flat Bottom | 420,000 | 630,000 |
| 15' 6" | Cone Bottom | 408,000 | N/A |
| 16' 6" | Flat Bottom | 470,000 | 705,000 |
| 21' 6" | Flat Bottom | 797,000 | 1,196,000 |

Need additional support? Contact customer service:

+1 800 551 3247 | assetguardproducts.com

ASSETGUARD